 
 


# Sulky Oxer Sport®

 
## Assembly Instruction

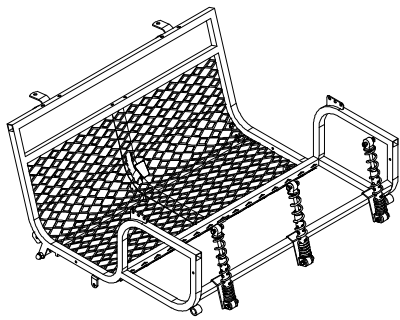


A x1

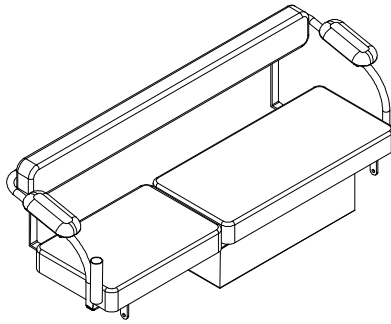


B x1

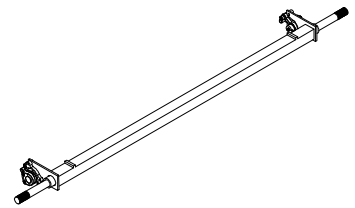


C x1

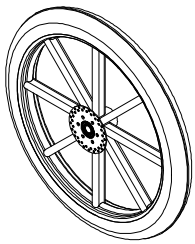 


D x2

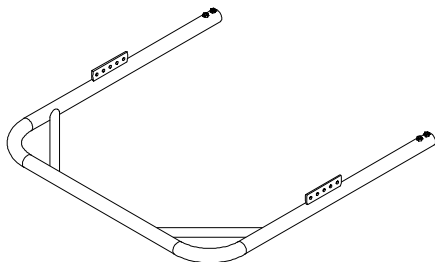 


E x1

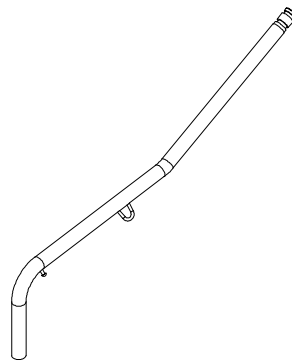 


F x1

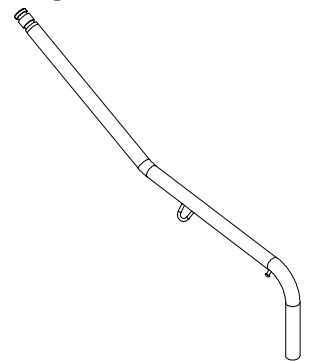 


G x1

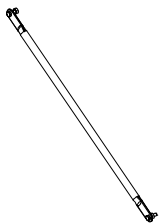 


H x2

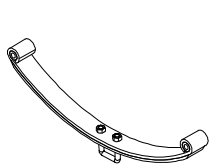 


I x2

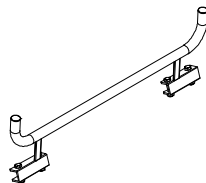 


J x1

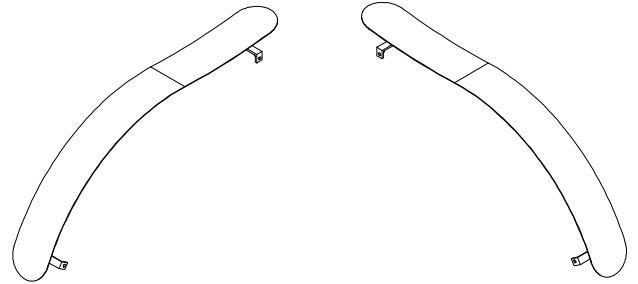 


K x1

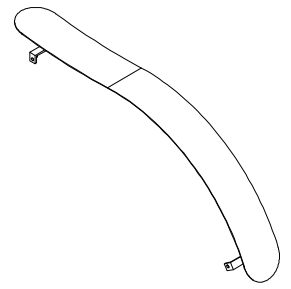 

L x1

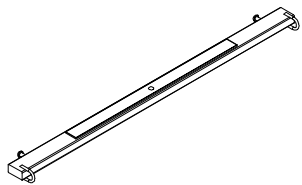 


M X1

 

N x1



 O x2



M10  
P x2



M10  
Q x2



 
M20  
R x2




M20  
S x2




T x2




11-13

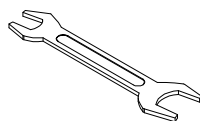 


14-17

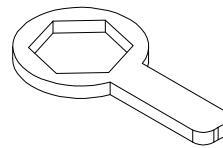 


30

 

#2.5

 

#4

 

#5

